
TABLA DE PERFILES CON JUNTA PREMONTADA
TABLE OF PROFILES WITH PRE-ASSAMBLED GASKET


45º

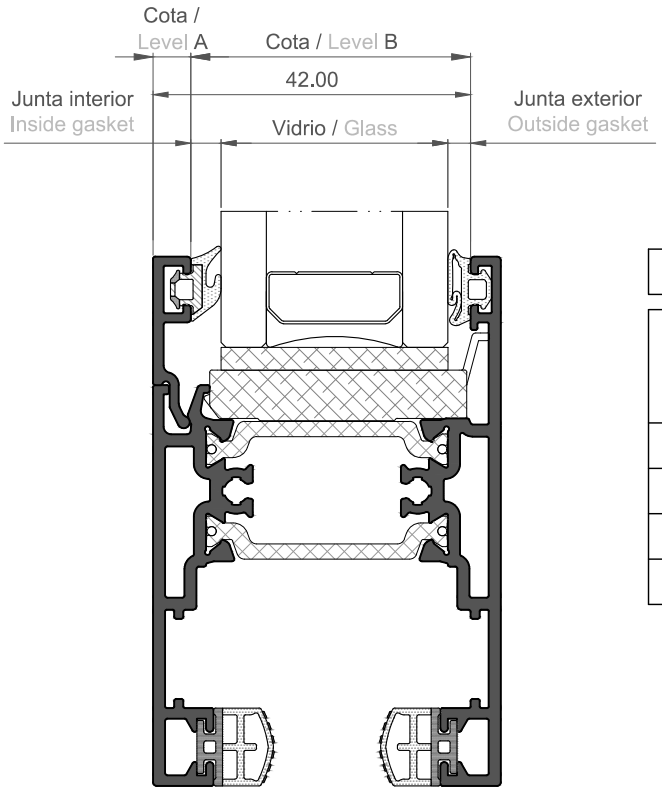


JUNTAS EXTERIORES / EXTERIOR GASKETS			
GRIS / GREY	NEGRO / BLACK	Espesor (mm) Thickness (mm)	Dibujo / Design
416656	416657	3,00	

ACRISTALAMIENTO / GLAZING					
Junquillo Glazing bead	Cota / Level A	Cota / Level B	Vidrio Glass	Junta Interior Inner Gasket	Junta Exterior Outer Gasket
COR-449110/20	5,00	37,00	**30**	4,00	3,00
COR-449210/20	7,00	35,00	**28**	4,00	3,00
COR-449310/20	9,00	33,00	**26**	4,00	3,00
COR-449410/20	11,00	31,00	**24**	4,00	3,00


JUNTAS PERIMTRAL HOJA / SASH PERIMETER GASKETS		
GRIS / GREY	NEGRO / BLACK	Dibujo / Design
384921	374921	

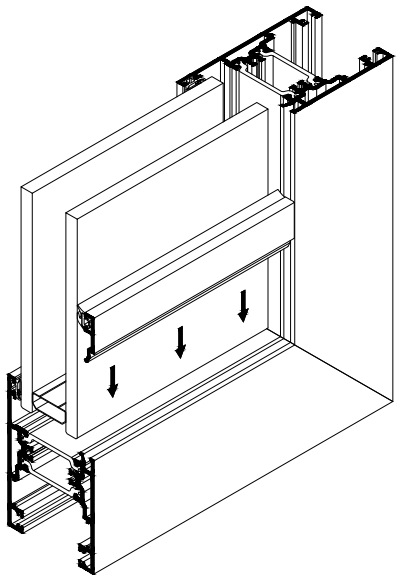

PERFILES CON JUNTA PREMONTADA PROFILES WITH PRE-ASSAMBLED GASKET			
Perfil base Base profile		**Junta GRIS** GREY gasket	**Junta NEGRO** BLACK gasket
	COR-4491	COR-449110	COR-449120
	COR-4492	COR-449210	COR-449220
	COR-4493	COR-449310	COR-449320
	COR-4494	COR-449410	COR-449420

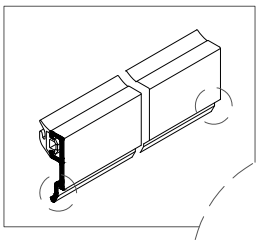



Alicates
Pliers

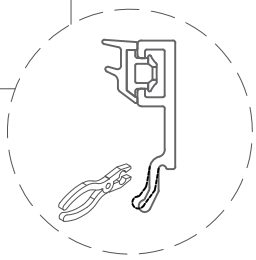


Para junquillos con acabado anodizado: doblar ligeramente los extremos de las patas del junquillo con la ayuda de un alicates para asegurar el correcto apriete del perfil.
For glazing beads with anodised finish: slightly bend the ends of the bead feet with the help of pliers to ensure the correct tightening of the profile.


PEGADO ESTRUCTURAL DEL VIDRIO EN NUDO CENTRAL REDUCIDO
STRUCTURAL GLUED OF REDUCED CENTRAL SECTION



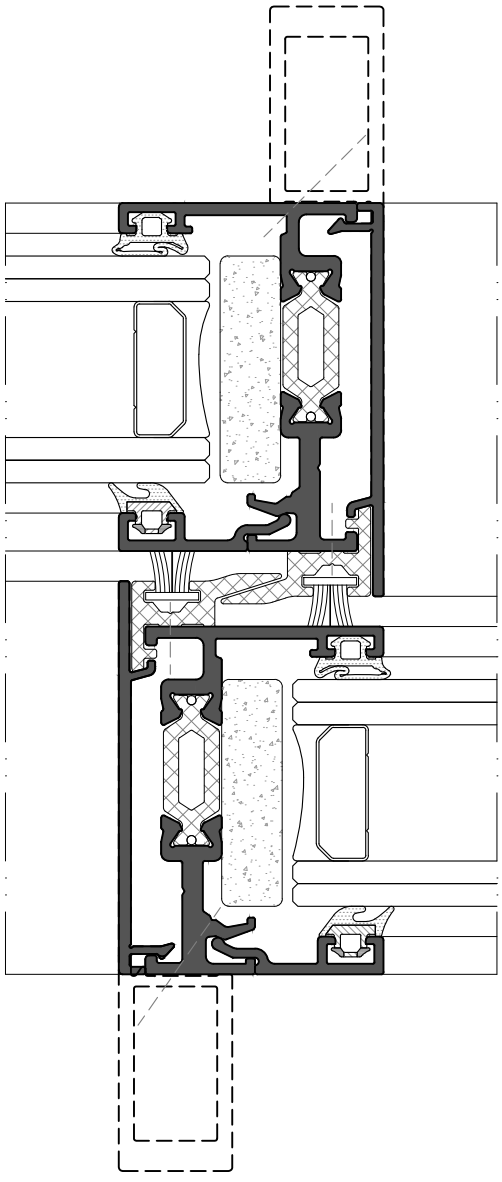

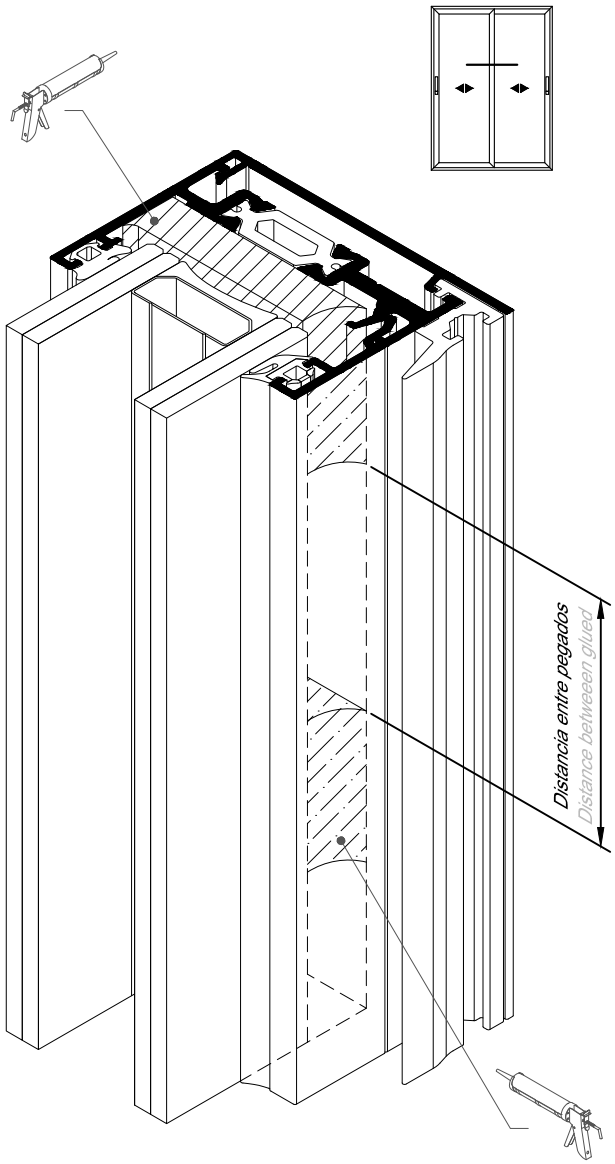

Distancia entre pegados / Distance betweeen glued

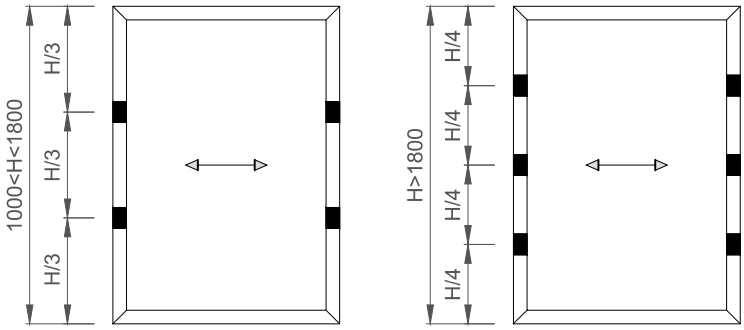



NOTA: Se debe realizar el pegado estructural del vidrio cuando se utilice la hoja reducida en el nudo central COR-4421.

NOTE: Structural glued of the glass must be carried out when using the reduced sash in the central section COR-4421.

CALZOS DE ACRISTALAR: POSICIONAMIENTO RECOMENDABLE
GLAZING SUPPORT WEDGE: RECOMMENDED POSITION

CORREDERA
SLIDING

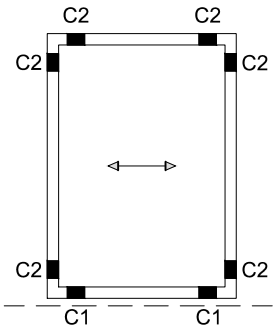

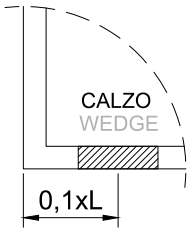


Nota:
Los calzos deben colocarse hacia el interior de los puntos de rodamiento.
Note:
The wedges must be placed towards the inside of the bearing points.

Nomenclatura de los Calzos:
C1 = CALZO DE APOYO.
C2 = CALZO PERIMETRAL.
C3 = CALZO DE SEGURIDAD.

Notas:
- Los calzos deben colocarse necesariamente como preven los croquis arriba indicados, sin añadir otros calzos en otras situaciones.
- La distancia entre el eje de los calzos y el borde del vidrio, será aprox. L/10 (L = longitud de vidrio).

Name of the wedges:
C1 = SUPPORT WEDGE.
C2 = PERIMETER WEDGE.
C3 = SECURITY WEDGE.

Notes:
- The wedges must be fitted as shown in the sketch shown above, without adding other wedges in different positions.
- The distance between the axis of the wedges and the edge of the glass will be approx. L/10 (L = length of the glass).

TIPO DE PERFIL PROFILE TYPE	REFERENCIA CALZO WEDGE REFERENCE	IMAGEN CALZO WEDGE IMAGE
HOJA SASH	454900	
HOJA REDUCIDA REDUCED SASH		